

Instruction Manual

Promax QS RPX612 Promax QS RPS812 Promax QS REX623 Promax QS RES823 Promax QS REX823 Promax QS RES1123 Promax QS RSX1035 Promax QS RSS1535



start here

démarrez ici starten sie hier iniziare qui begin hier empieza aquí comece aqui buradan başlayın ξεκινήστε εδώ start her aloita tästä start her börja här rozpocznij tutaj začněte zde kezdés itt начинать здесь

Specifications			
Model	Promax QS RPX612	Promax QS RPS812	
Cut level	P4 (4x35mm)	P2 (6mm)	
Sheet Capacity	6 sheets (80 gsm)	8 sheets (80 gsm)	
Run Time / Cool Down Time	8 mins on / 30 mins off	8 mins on / 30 mins off	
Bin Size	12 litres	12 litres	
Volts / Hz	230-240V AC / 50Hz	230-240V AC / 50Hz	
Amperage	1.2 A	1.0 A	
Model	Promax QS REX623	Promax QS RES823	
Cut level	P4 (4x35mm)	P2 (6mm)	
Sheet Capacity	6 sheets (80 gsm)	8 sheets (80 gsm)	
Run Time / Cool Down Time	10 mins on / 30 mins off	10 mins on / 30 mins off	
Bin Size	23 litres	23 litres	
Volts / Hz	230-240V AC / 50Hz	230-240V AC / 50Hz	
Amperage	1.2 A	1.5 A	
Model	Promax QS REX823	Promax QS RES 1123	
Cut level	P4 (4x35mm)	P2 (6mm)	
Sheet Capacity	8 sheets (80 gsm)	12 sheets (80 gsm)	
Run Time / Cool Down Time	15 mins on / 30 mins off	15 mins on / 30 mins off	
Bin Size	23 litres	23 litres	
Volts / Hz	230-240V AC / 50Hz	230-240V AC / 50Hz	
Amperage	1.5 A	1.2 A	
Model	Promax QS RSX1035	Promax QS RSS1535	
Cut level	P4 (4x35mm)	P2 (6mm)	
Sheet Capacity	10 sheets (80 gsm)	15 sheets (80 gsm)	
Run Time / Cool Down Time	15 mins on / 30 mins off	15 mins on / 30 mins off	
	15 mins on / 30 mins off 35 litres	15 mins on / 30 mins off 35 litres	
Cool Down Time			

Promax QS RPX612 Promax QS RPS812 Promax QS REX623 Promax QS RES823 Promax QS REX823 Promax QS RES1123 Promax QS RSX1035 Promax QS RSS1535


EN	4
FR	5
DE	6
Π	7
NL	8
ES	9
PT	10
TR	11
GR	12
DA	13
ED	14
NO	15
SV	16
PL	17
CS	18
HU	19
RU	20



To register and activate the warranty go to www.rexeleurope.com/register



For service addresses, go to www.rexeleurope.com/en-gb/services/service-centres/

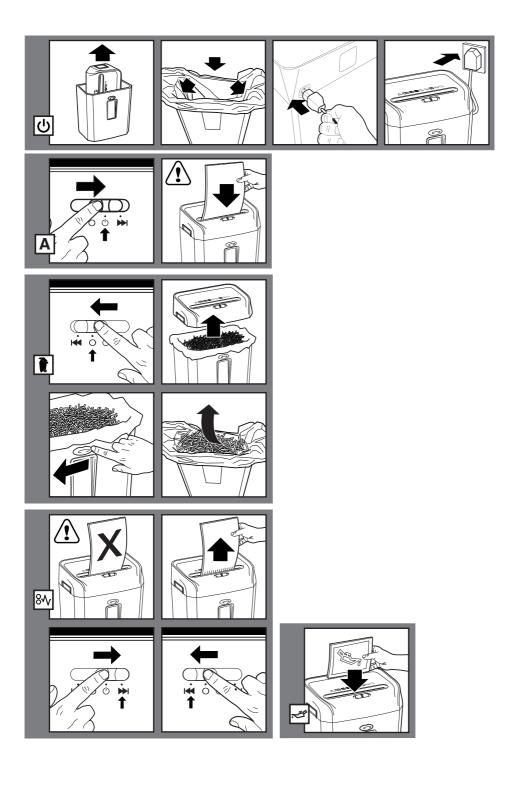

Re (el

Please read and keep these important safety instructions

For a copy of the operating instructions, hints & tips and troubleshooting guide, please visit www.rexeleurope.com



The following symbol which is found on the product indicates you could be seriously hurt or killed if you open the machine. **DO NOT OPEN.**





Warning: Do not touch cutters, beware of sharp edges.

Warning: Moving parts hazard, keep hands away from ore rollers whilst in operation.

- Only use the unit for its intended purpose.
- The unit must only be connected to a supply voltage corresponding to the electrical rating shown on the unit.
- Unit should be connected to a socket outlet near the equipment that is easily accessible.
- Do not connect to multi adaptors or use with an extension cable.
- Failure to follow these instructions could result in damage/injury and will invalidate your warranty.
- Do not attempt to service or repair the unit yourself.
- In the event of a fault, unplug the unit and contact an authorised Rexel service representative for any required repairs.
- If recycling, separate paper and credit card shreds.
- Do not use this unit if the cable or plug have been damaged.
- Power cord must be connected to a socket-outlet with earthing connection.
- Unplug this equipment when not in use for an extended period of time.

Warning symbols

Keep long hair clear

Ties and loose clothing hazard

Keep loose jewellery clear

Do not reach into opening

This equipment is not intended for use by children



Manual feed slot capacity

Will accept small staples

Will accept small paperclips

No oil, use Rexel oil sheets only



Waste Electrical and Electronic Equipment (WEEE)

At the end of its useful life, your product is considered to be WEEE. As such, it is important to note that: WEEE is not to be disposed of as unsorted municipal waste. It is to be collected separately such that it can be disassembled so its components and materials can be recycled, re-used, and recovered (burned for energy content in the production of electricity).

Public collection points have been set up by municipalities for the collection of WEEE, free of charge to you.

Please return your WEEE to the collection facility nearest your home or office.

If you have difficulty locating a collection facility, the retailer that sold you the product should accept your WEEE.

If you are no longer in contact with your retailer, please contact ACCO for assistance with this matter.

Recycling of WEEE is geared toward protecting the environment, protecting human health, preserving raw materials, improving sustainable development, and ensuring a better supply of commodities in the European Union. This will be achieved by retrieving valuable secondary raw materials and reducing the disposal of waste. You can contribute to the success of these goals by returning your WEEE to a collection facility.

Your product is marked with the WEEE symbol (wheelie bin with an X through it). This symbol is to inform you that the WEEE is not to be disposed of as unsorted municipal waste.

Warranty

Operation of this machine is warranted for two years from date of purchase, subject to normal use. Within the warranty period, ACCO Brands Europe will at its own discretion either repair or replace the defective machine free of charge. Defects due to misuse or use for inappropriate purposes are not covered under the warranty. Proof of date of purchase will be required. Repairs or alterations made by persons not authorised by ACCO Brands Europe will invalidate the warranty. It is our aim to ensure that our products perform to the specifications stated. This warranty does not affect the legal rights which consumers have under applicable national legislation governing the sale of goods.

This warranty does not apply to Australian customers - see warranty on page 21.

Indicators

Oil

Oil



Accessories Only use Rexel accessories:

Sheets (20)	- 2101949
Sheets (12)	- 2101948

Please note, the maximum sheet capacity may vary due to factors such as paper density, texture and humidity.

EN