


---

**LEITZ Precision**  
GUILLOTINE / HEBELSCHNEIDER

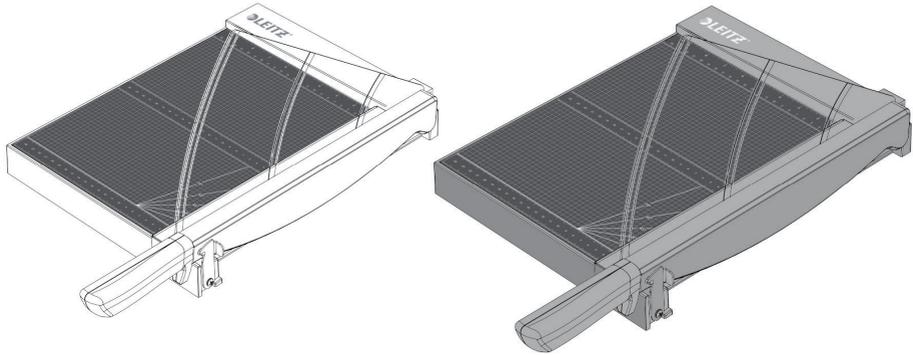

	Precision Home A4	Precision Home Office A4 /A3
<b>Item / Artikel #</b>	90180000	90190000 / 90200000
<b>Sheet Capacity / Schnittleistung</b>	8 x 80gsm (0.8mm)	10 x 80gsm (1.0mm)
<b>Cutting Length / Schnittlänge</b>	A4 305mm	A4 305mm / A3 420mm
<b>EdgeGlow Power Source / Stromquelle</b>	N/A	3xAAA

	Precision Office A4+/A3	Precision Office Pro A4+/A3
<b>Item / Artikel #</b>	90210000 / 90220000	90230000 / 90240000
<b>Sheet Capacity / Schnittleistung</b>	15 x 80gsm (1.5mm)	25 x 80gsm (2.5mm)
<b>Cutting Length / Schnittlänge</b>	A4+ 381mm / A3 420mm	A4+ 381mm / A3 420mm
<b>EdgeGlow Power Source / Stromquelle</b>	3xAAA	3xAAA

- EN 4
- DE 5
- FR 6
- IT 7
- ES 8
- PT 9
- NL 10
- DA 11
- NO 12
- SV 13
- FI 14
- ET 15
- LV 16
- LT 17
- PL 18
- UK 19
- RU 20
- KK 21
- CS 22
- SK 23
- HU 24
- RO 25
- GR 26
- TR 27
- AR 28



Precision Home (90180000)



Precision Home Office (90190000 / 90200000)



Precision Office & Office Pro (90210000 / 90220000 / 90230000 / 90240000)



To register and activate your warranty go to

[www.leitz.com/register](http://www.leitz.com/register)

Um sich zu registrieren und die Garantie zu aktivieren gehe zu

[www.leitz.com/register](http://www.leitz.com/register)

Fig. 1

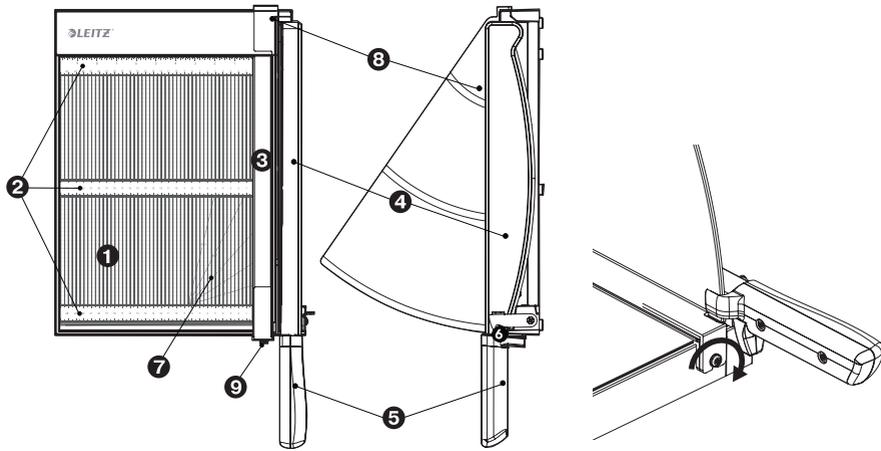


Fig. 2

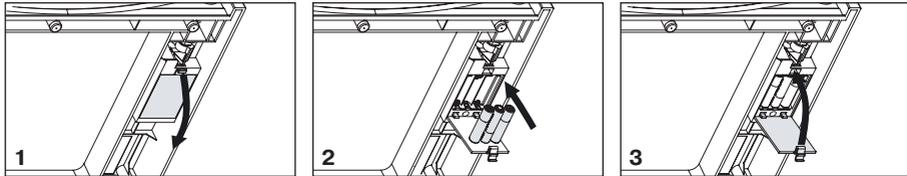


Fig. 3


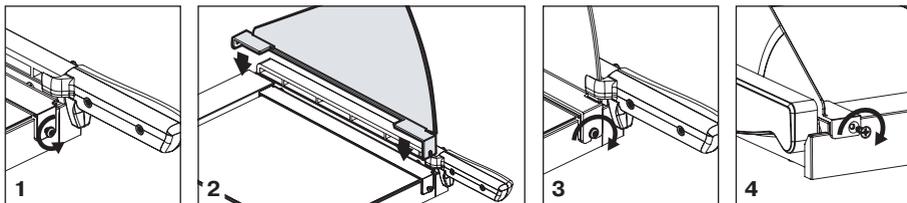


Fig. 4

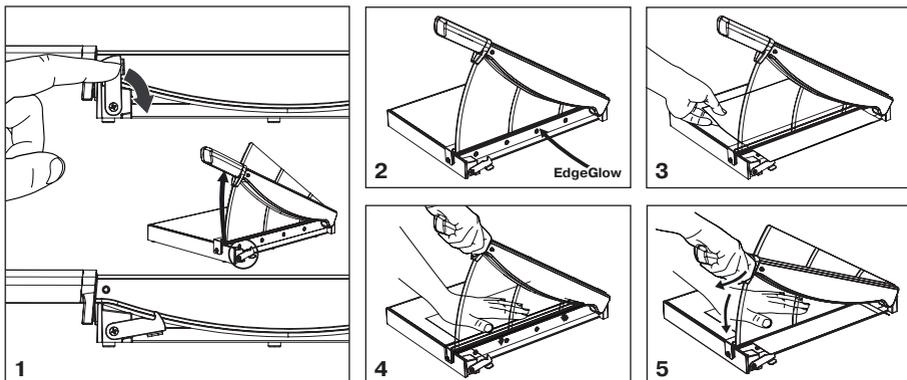

## Key Features (see fig. 1)

1. Guillotine base with calibrated grid
2. Ruler
3. Safety guard rail
4. Cutting blade arm
5. Handle
6. Blade safety lock
7. Angle measures
8. Safety guard
9. Safety guard retaining bracket

## Safety Instructions



**CAUTION:** To be used only by adults or by children when under strict adult supervision



**CAUTION:** Sharp blade, do not touch the edge of the blade



**CAUTION:** Always operate the guillotine with the safety guard in place, the safety guard must be secured to the handle using the retaining bracket



**CAUTION:** Always lock the blade/handle in the down, closed position when not in use



**CAUTION:** Do not carry the guillotine by holding the cutting blade or the cutting arm



**CAUTION:** Do not lubricate the blade

**NOTE:** Please retain this information regarding safe operation of this paper guillotine

## EdgeGlow (see fig. 2)

This feature helps illuminate the cutting edge.

The 3 x AAA batteries provided should be inserted into the battery compartment located beneath the guillotine base.

## Fitting the Safety Guard (see fig. 3)



**CAUTION:** Sharp Blade. Lock blade arm down with the safety lock before installing the safety guard.

1. Using a screwdriver loosen the screw in the safety guard rail next to the handle
2. Position the safety guard as illustrated
3. Tighten the screw to secure the safety guard to the safety guard rail
4. Using the additional screw provided secure the other end of the safety guard to the Guillotine

## Operating the Guillotine

Do not carry the guillotine by holding onto the cutting blade arm or handle

Remove staples, paper clips etc before cutting

Do not cut metal film or film containing glass etc.

Do not cut more sheets than the stated sheet capacity

Place the guillotine on a stable, flat surface such as a table. (see fig. 4)

1. Unlock the blade
2. Lift cutting blade arm into the cutting position. The EdgeGlow light will illuminate
3. Position the material to be cut under the safety guard rail. Use the calibrated grid and ruler to ensure a precise cut.
4. With your left hand, hold the material securely in place to be sure it remains correctly aligned while cutting.
5. Apply slight pressure on the handle inward towards the guard, whilst pressing down firmly to cut the material.

When finished using the guillotine, always place the cutting arm in the down position and secure the blade safety lock.

## Maintenance

- Guillotines can be cleaned with a dry lint-free cloth
- Check the fitting of the cutting blade arm and safety guard from time to time. Do not use the product if the blade fitting is loose.
- Do not attempt to service or repair the unit yourself

## Guarantee

- Within the guarantee period, ACCO Brands Europe will at its own discretion either repair or replace the defective machine free of charge. Defects due to misuse or use for inappropriate purposes are not covered under the guarantee.
- Proof of date of purchase will be required. Repairs or alterations made by persons not authorised by ACCO Brands Europe will invalidate the guarantee. It is our aim to ensure that our products perform to the specifications stated. This guarantee does not affect the legal rights which consumers have under applicable national legislation governing sale of goods.