

Parameter Information

Model	CT3017	Input	Bluetooth/AUX/Optical/RCA/USB
Dimensions	710mm x 100mm x 105mm(L*W*H)	Channel	2.0 stereo
		Distortion	<1%
Frequency	50HZ-20KHZ	SNR	≥80dB
Material	Plastic ABS + cloth net	Power Input	19V

Troubleshooting

No Power

- The cables between Sound Bar and input devices are securely connected, the power adapter is also connected to a working power source.
- The adapter LED indicator is lighting, and the LED indicator is lighting in the middle of Sound bar.

No sound or crackling noise

- Check if all cables are connected properly.
- Press Mute on the remote to ensure the Sound Bar is not muted.
- Press Volume+ on the remote or the right side of your Sound Bar.
- Make sure you have selected the right input source on your remote, and the LED is lighting accordingly.
- If using Bluetooth, ensure your volume is high on both the device and sound bar.
- If using Optical/HDMI, check if your device (TV/Cable Box/Projector/etc.) audio output set to PCM or turn the Dolby/dts off.
- When using cable connection, make sure your device has audio output port (not input).

Remote isn't working

- Check if the batteries are installed properly.
- Ensure there are no obstructions between the remote and the receiver.

I hear buzzing or humming

- Ensure all cables and wires are securely connected.
- Connect a different source device (TV, Media player, etc) to see if the buzzing persists. If it does not, the problem may be with the original device.
- Connect your device to a different input on the Sound Bar.

Bluetooth can't connect

- Check if the Sound Bar is connected with a third Bluetooth device.
- Be sure that there are no solid obstructions between the Sound Bar and source device.(within 30 feet)
- Reboot the Bluetooth and connect again.
- Press and hold the "BT" button for 3-5 seconds, and use your Bluetooth device to connect it again.

No sound during optical connection

- Check if there is any other audio cable connected with your TV(Such as aux cable or headphone cable), unplug it and see if the sound bar works under optical cable connection.

Hear echo when watching TV

- Setting your TV audio to External Speaker.
- Mute the TV speaker.



Speaker Sound Bar Econo - CT3017

User Manual



 
Tel: (RSA) 010 140 4900 / Email: sales@parrot.co.za
www.parrot.co.za

What's in the Box


- Sound Bar
- Remote Control (2 x AAA Batteries - not included)
- Audio Cable
- Power Adapter (3 x Pins)
- Wall Mount Template
- Mounting Screws and Wall Mount Brackets
- User Manual

Controls and Connections


Front

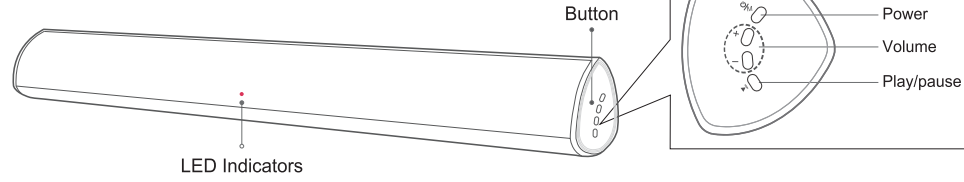

Back

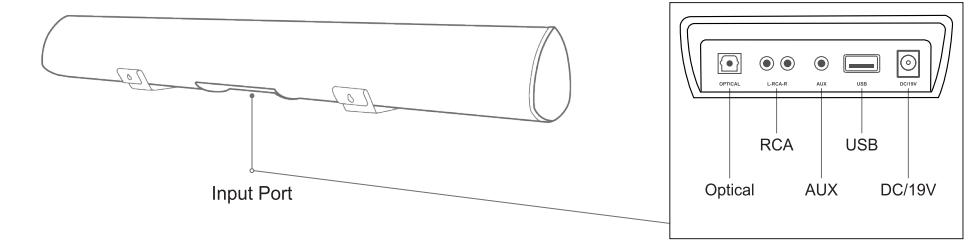 

Button Introduction

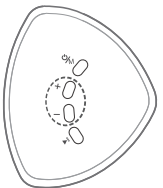 

Right side of Sound Bar

- Press to turn on / change the audio source; Press and hold to turn off.
- Adjust the volume (+) (-), when adjusting, the LED indicator flashes until the volume to the MAX or MIN.
- Pause and Play, Press and hold to reset treble and bass to factory settings.

 


Wall Mount Instructions


1. Fix the wall mount template on the wall.
2. Punch holes according to the hole position on the wall and drive the plastic expansion pipe into it.
3. Place the wall bracket according to the hole position, and nail in.
4. Hang up the audio bracket accordingly.

Connection & Power

1. Connection between your Sound bar and TV

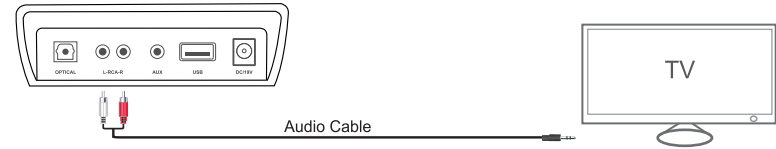

 
2. Power on your Sound Bar

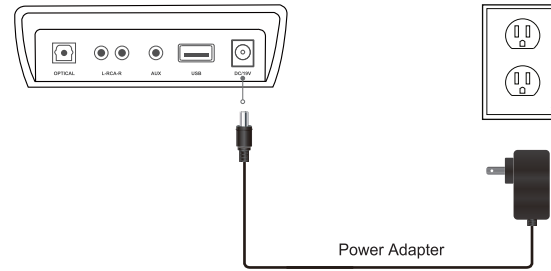

- Audio cable connection (the above is for TV connection display, Other devices with audio interface function can also be used).
- Some TV sets need to be switched to external audio, otherwise there are There may be an echo (both TV and soundbar sound).

Indicator Light Explanations

 The LED Indicators will behave differently with each button on the remote control.



Indicator Color	Indicator Shape	Connection Type	Device
Blue	Circle	Wireless	Mobile phone/iPad or other Bluetooth enabled devices
Orange	Circle	Cable	TV or Other equipment
White	Circle	Cable	TV or Other equipment
Cyan	Circle	Cable	TV or Other equipment
Purple	Circle	USB	USB