
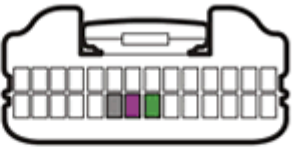

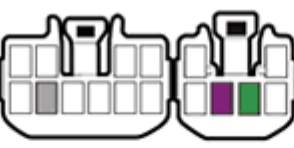
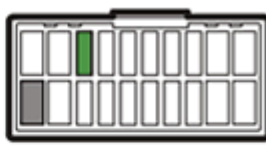

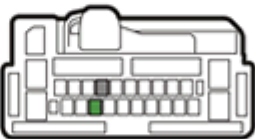
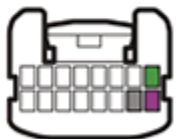

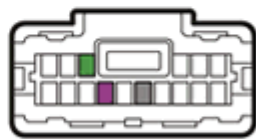
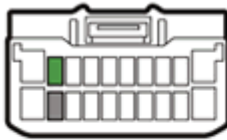



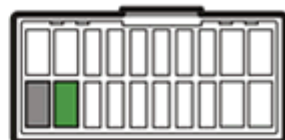


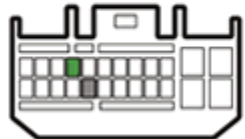
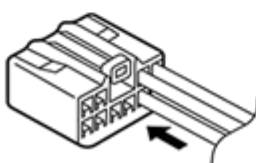


TOYOTA (20P)	TOYOTA (28P)	TOYOTA (26P)	TOYOTA (10P+6P)	HONDA (20P-B)
				
Input 1 : Green Input 2 : Purple ST REMOTE GND : Gray	Input 1 : Green Input 2 : Purple ST REMOTE GND : Gray	Input 1 : Green Input 2 : Purple ST REMOTE GND : Gray	Input 1 : Green Input 2 : Purple ST REMOTE GND : Gray	Input 1 : Green Input 2 : NC ST REMOTE GND : Gray
HONDA (20P-A)	HONDA (24P)	NISSAN (16P-A)	NISSAN (20P)	NISSAN (16P-B)
				
Input 1 : Green Input 2 : NC ST REMOTE GND : Gray	Input 1 : Green Input 2 : NC ST REMOTE GND : Gray	Input 1 : Green Input 2 : Purple ST REMOTE GND : Gray	Input 1 : Green Input 2 : Purple ST REMOTE GND : Gray	Input 1 : Green Input 2 : Purple ST REMOTE GND : Gray
MITSUBISHI (20P)	MAZDA (24P)	SUBARU (20P)	SUBARU (8P)	SUZUKI (20P)
				
Input 1 : Green Input 2 : NC ST REMOTE GND : Gray	Input 1 : Green Input 2 : NC ST REMOTE GND : Gray	Input 1 : Green Input 2 : NC ST REMOTE GND : Gray	Input 1 : Green Input 2 : NC ST REMOTE GND : Gray	Input 1 : Green Input 2 : NC ST REMOTE GND : Gray
ISUZU (16P)	HYUNDAI / KIA (24P-A)	HYUNDAI / KIA (24P-B)	*How to view Steering Remote Connector	
			 <p>All steering wheel remote controls above are vehicle side connectors and drawn from the side. (view indicated by arrow)</p>	
Input 1 : Green Input 2 : NC ST REMOTE GND : Gray	Input 1 : Green Input 2 : NC ST REMOTE GND : Gray	Input 1 : Green Input 2 : NC ST REMOTE GND : Gray		