 






Electronic Water Timer Manual (P30079)

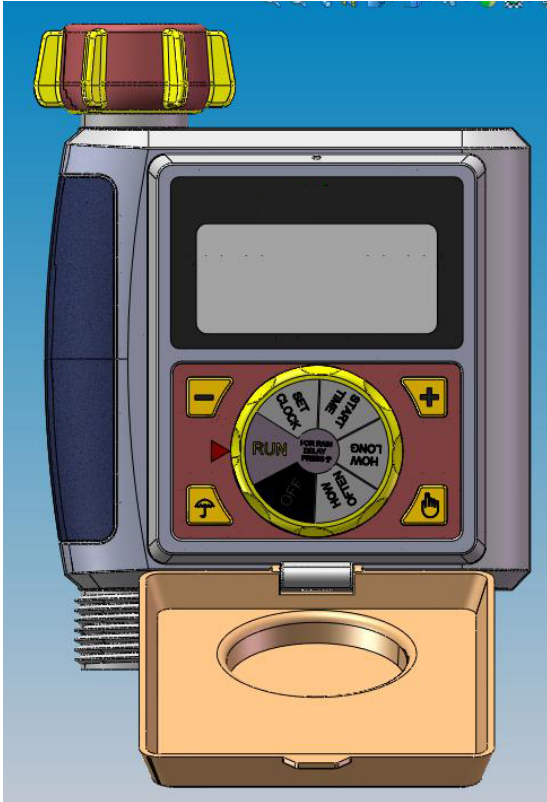

4 buttons:

- rain delay button: " ,
- manual watering button: " "
- "+"
- " - "

Display full screen





When battery loaded, the LCD default clock time is 12:00,



SET CURRENT TIME

*Turn the Dial to SET CLOCK

*Use + & - to adjust to current time

Auto Mode:

Set the start time

*Turn the dial to "SET START TIME"

*Use + & - to adjust to your desired time.



Set the running time

*Turn the dial to "HOW LONG "

*Use + & - for adjustment. The setting ranges from 0 secs to 360 mins.





Set the Frequency



*Turn the dial to “HOW OFFTEN”

*Use + & - for adjustment. The setting ranges from 10 secs to 7 days




** If no programs are made, display will show clock time only


** If programmed, the display will show current clock time and next start watering clock time.

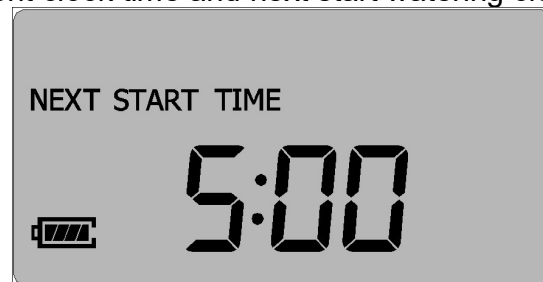
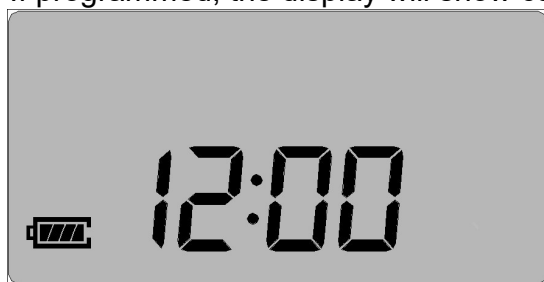



When finished all above setting, turn the dial to “RUN” to enjoy the automatic watering program.

Manual Watering Mode:

Turn the dial to run and press the manual  watering button. Then set the desired time by using the + & - . Long press the buttons to speed up the setting. You can set the time range between 0 – 240 mins.

Once setting finished, the display will alternate between the current time and a running Countdown of the manual watering time set. Default manual irrigation time is 30mins and you can set between 0-240 mins .The 3 water drops icon “” will be rotate on clockwise, to indicate that it's working.

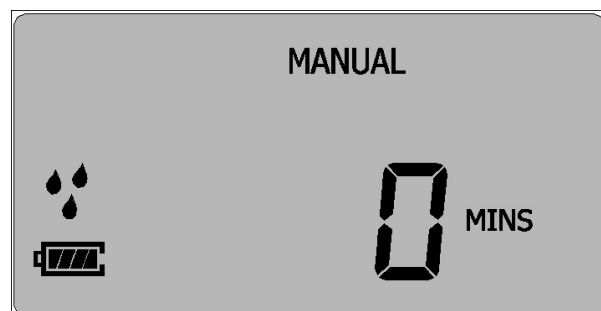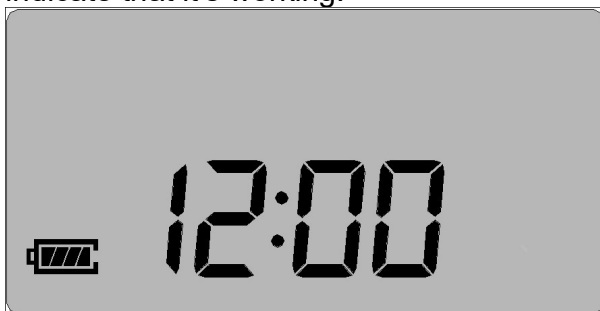

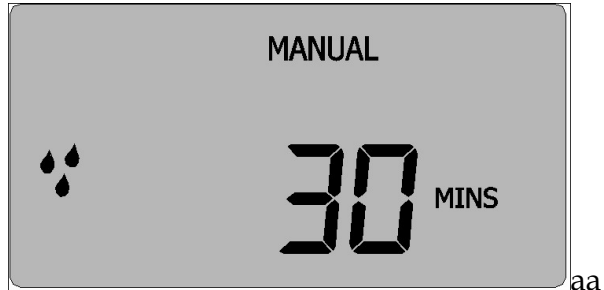

OFF Mode:

When turn the dial to OFF, the timer stopped working. When the dial turn back to RUN, the timer will revert back to the set automatic watering programs




How to Set Rain Delay


Press the “☔” button to set the delay your auto program for the rainy day. You can delay between 24, 48 and 72 hours.

Once the rain delay function set , the display will alternate between the current time and a countdown of the set delay time.

Turn the rotary knob to “OFF” and then back to “Auto” position, the rain delay setting is cancelled and the timer will revert back to the set automatic watering programs.



The battery voltage has 3 levels, it shows full voltage as “”, middle voltage as “”, when the voltage value is low it is shows lower voltage as “”. Lower voltage condition will close the solenoid valve compulsively, the auto mode and manual mode will be invalid.

“”, this battery icon will flash and will need to change to new battery

