

Jaton Lyra 661 Stand Assembly Instructions

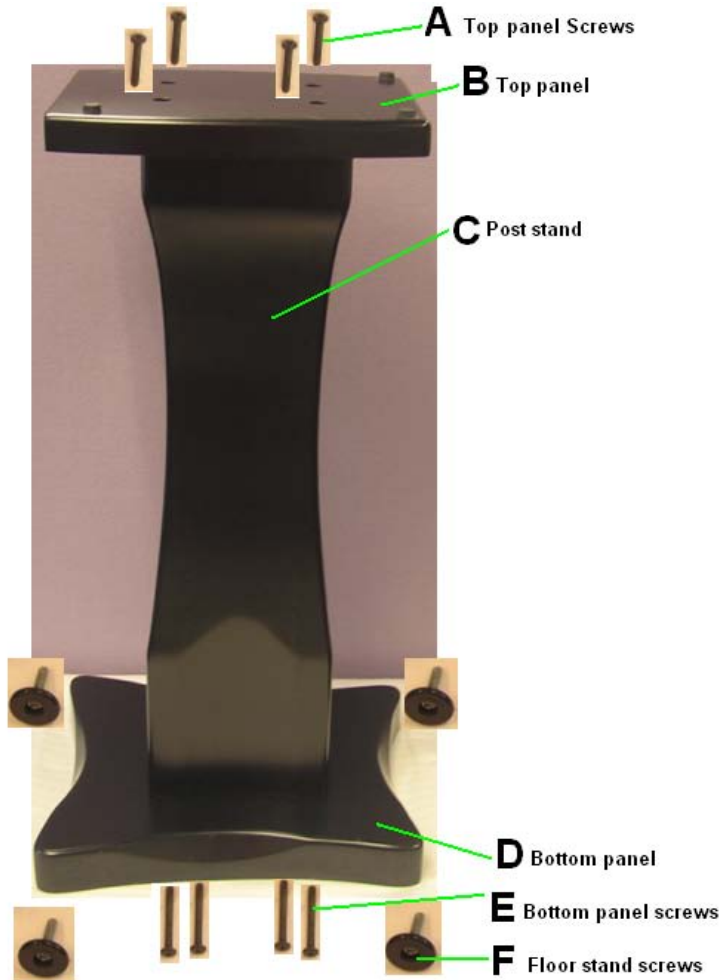


Figure. 1



Figure. 2

1. Screw item # "F", Floor stand screws into the 4 corners on the bottom side of "D".
2. Put the "D" upside down on top of the upside down side of the "C", post stand. Then screw all 4 "E" from the bottom side of "D" into "C" to tight the "C" & "D".
3. Then move upside down the "C"&"D" and put the "B" on top of it.
4. Screw "A" screws into "B" and tight up the "B" & "C" (Fugure.1)

P.S. Both top and bottom will have the narrow side to become the front side and Wide side will become the rear side of the stand. (Figure.2)